


SWAGELESS TERMINAL "SMALL"

AISI 316

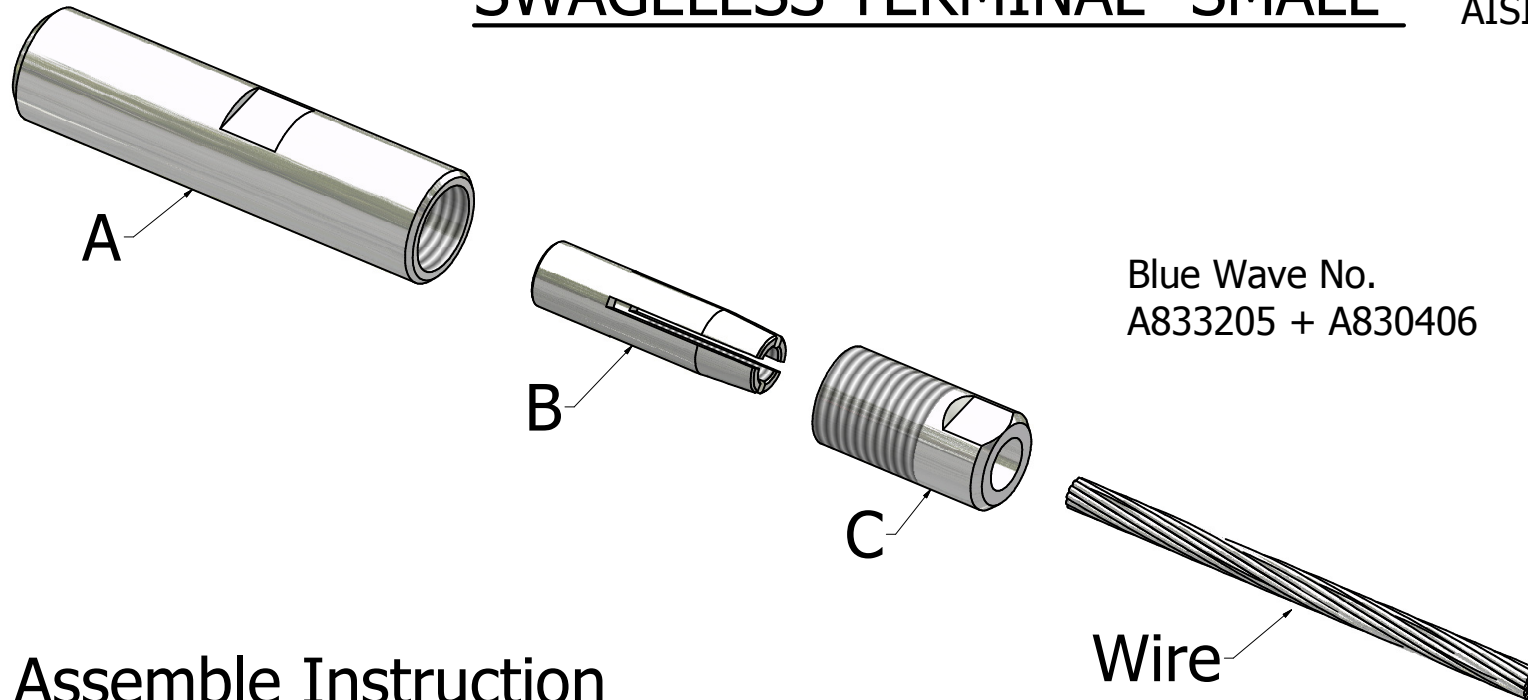

Blue Wave No.
A833205 + A830406

Assemble Instruction

1. Slide the "jaw-house C" over the wire.
2. Slide the "jaw B" over the wire, until the wire is flush with the edge of the "jaw B".
3. Screw the "house A" together with "jaw-house C", and tighten firmly with 2 spanners.



Only for use with wireropes 7x19 and 7x7